




# ELECTRIC EXIT DEVICE KIT INSTALLATION INSTRUCTIONS MOTOR DRIVE ELECTRIC LATCH RETRACTION

## 1550K-MDC

CORBIN RUSSWIN ED4000 AND ED5000 SERIES  
FOR USE WITH YALE 7000 SERIES

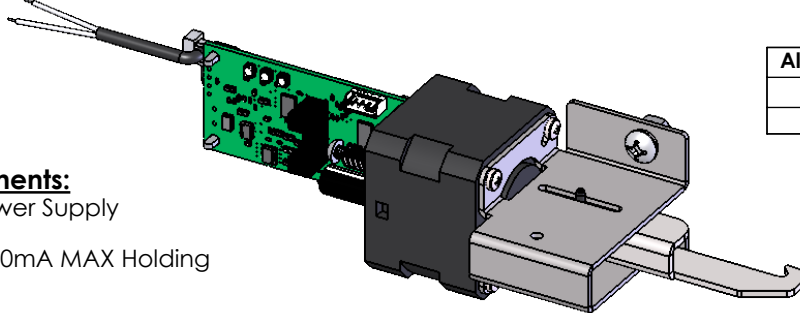

Allowable Cutoff From Device Length	
Standard 36"	Standard 48"
3.00"	10.75"

### Electrical Input Requirements:

Filtered and Regulated Power Supply  
Voltage: 24VDC  $\pm$  10%  
Current: 1A MAX Inrush, 400mA MAX Holding  
Non-polarized Leads



### PROVIDES SIMULTANEOUS ELECTRIC LATCH RETRACTION AND DOGGING (TOUCH BAR DEPRESSED)


#### Installation:

1. Separate the end cover from the exit device.
2. Remove the manual dogging assembly, if present, from the bar and carrier assembly and discard.
3. Locate the 1550K-MDC Kit near the holes that secured the manual dogging assembly.
4. Depress the touch bar to locate the connecting pin of the rear mechanism closer to the connecting link.
5. Rotate the kit to allow the connecting link to slide between the pivot pin and connecting pin of the rear mechanism and be positioned forward of the connecting pin. Release the touch bar.
6. Attach the motor bracket to the bar and carrier assembly using the supplied threadforming screws and lockwashers through the holes that secured the manual dogging assembly. The supplied locknuts may also be used if the holes are stripped of threads. This will require the bottom rail to be separated from the bar and carrier assembly.
7. Attach the end cover to the exit device.
8. Apply the supplied technical assistance labels to the active head cover and the end cap.

**Do not remove any regulatory labels adhered to the device.**

2-Conductor Wire Run	
Distance	Wire Gauge
70'	22
110'	20
180'	18
280'	16
450'	14
720'	12

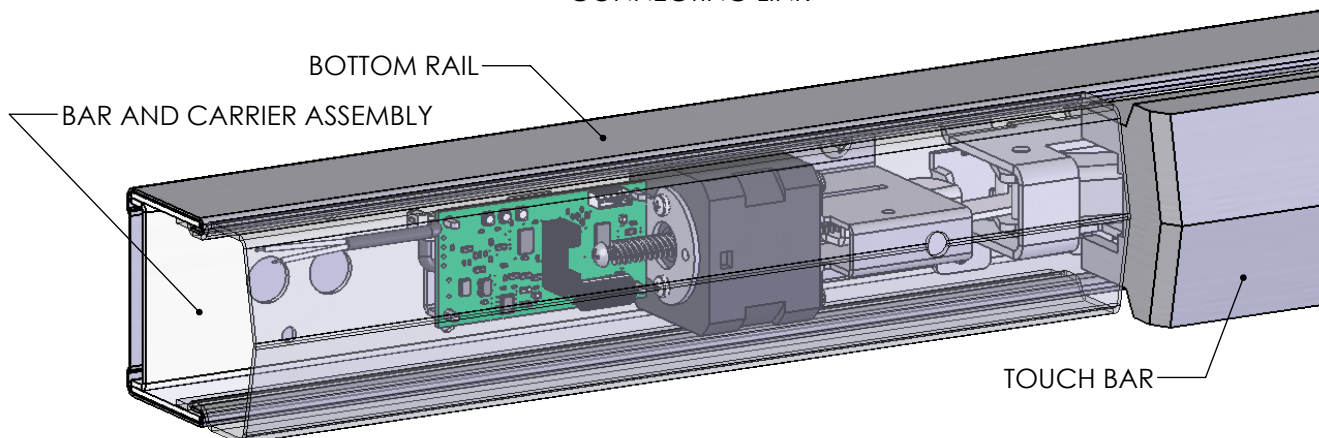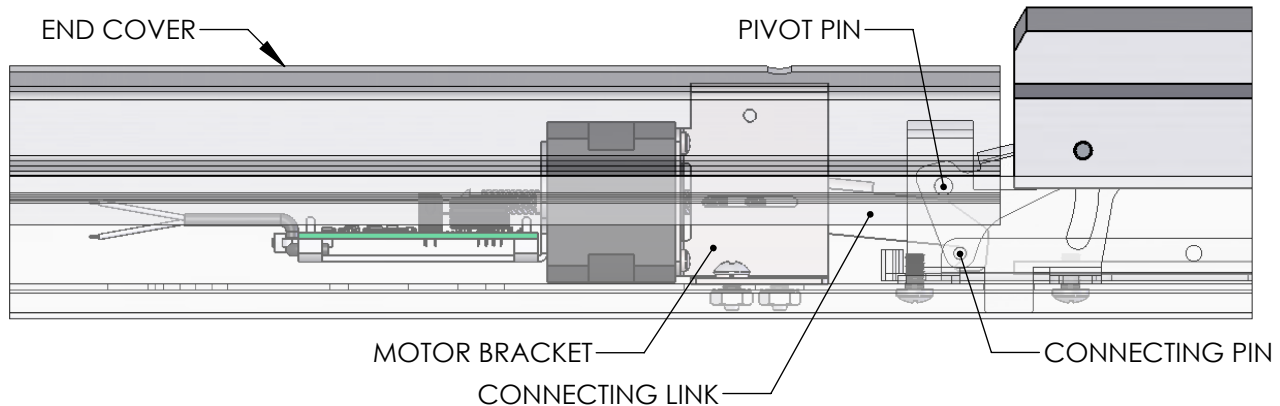

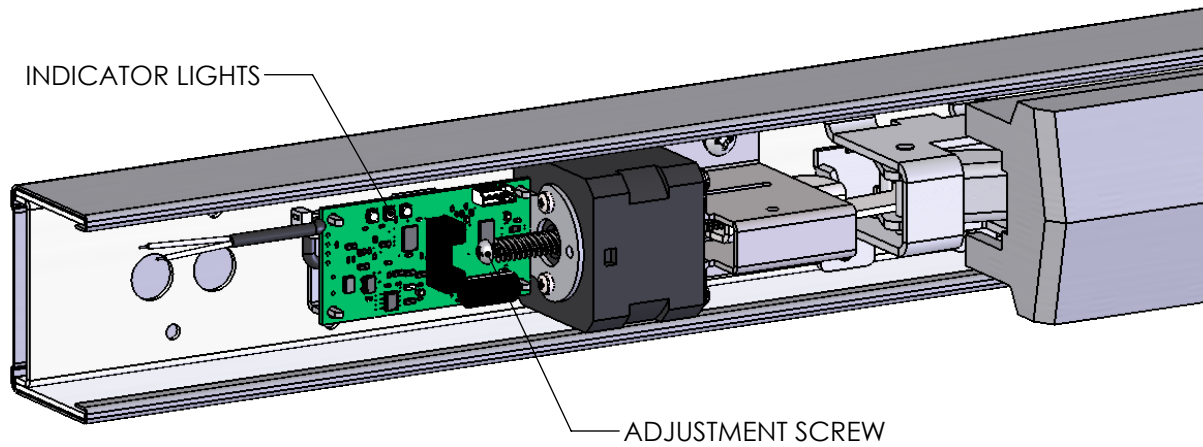

**Motor Drive Electric Latch Retraction Adjustment:**

1. Verify the device is properly adjusted for mechanical operation. Electric operation should not exceed the mechanical operation or there will be a high risk of damage to the device. **We suggest setting the latch retraction under electric operation at 1/16" less than the latch retraction under mechanical operation.**
2. Locate the adjustment screw in the rear of the motor assembly. Rotate the adjustment screw clockwise to increase the latch retraction or counterclockwise to decrease the latch retraction.

**Onboard Indicator Light Assignments:**

Maintain input power to the exit device and check the onboard indicator lights.

**Remove input power before attempting a solution.**

Green (Power)	Yellow (Sensor)	Red (Error)	Indication	Possible Solution
Off	Off	Off	No Power.	Connect the wiring between the power supply and the exit device.
On	On	Off	Normal Operation. The touch bar is retracted to the dogged position and dogged; the latch is retracted by default. The device is allowed 2 attempts.	
On	Off	On	Error in operation. The touch bar did not retract to the dogged position within 2 attempts.	Rotate the adjustment screw counterclockwise to decrease the latch retraction.
On	On	On	Error in operation. Without power being removed, the touch bar went from being dogged to unintentionally being extended, and then the touch bar did not retract to the dogged position within 2 attempts.	Clear the jam condition manually.
On	Blink	On	Error in operation. The touch bar did not extend from the dogged position when the power was last removed. The device will not attempt a retraction.	Clear the jam condition manually.
On	Simultaneous Blink		Error in operation. The input voltage dropped below the specification during operation.	Decrease the wire run or increase the wire gauge.
On	Alternating Blink		Error in operation. An electronics fault was detected.	An electronics replacement is required.