

SCHLAGE L9070 & L9453 ELECTRIC LOCK M1510/1520C

FUNCTION CHANGE INSTRUCTIONS

TO CHANGE THE LOCKING FUNCTION FOLLOW THE BELOW INSTRUCTIONS CAREFULLY.

STEP 1: REMOVE THE 4 COVER SCREWS AND COVER

STEP 2: USING THE ILLUSTRATION BELOW, REMOVE PIN AND REPLACE PIN IN PROPER HOLE AS FOLLOWS

A FOR FAIL SECURE M1520C (POWER UNLOCK) FUNCTION

B FOR FAIL SAFE M1510C (POWER LOCK) FUNCTION

STEP 3: REPLACE COVER AND SCREWS. MAKE SURE SOLENOID IS PROPERLY POSITIONED IN COVER SLOT.

